

RKP-01 REMOTE KEYPAD

COMPATIBLE WITH 3000,5000,6000 SERIES WIRELESS HOME SECURITY SYSTEM

INTRODUCTION

The Remote Keypad is designed to provide the following functions:

- System Arm
- System Disarm
- Panic Alarm Facility

The Keypad code is used to Arm and Disarm the system and is factory default to 1 2 3 4. A Panic function is included that allows the user to activate the sirens instantly.

SETTING UP FOR USE

Prior to use this unit must be set to the correct Site Code identical to that of the Main Control Panel and the security keypad code must be changed from the manufactures original setting.

STEP 1 SET THE SITE CODE

- 1) Write down the Site Code switch settings in the ON position that you have chosen in your control panel. For example you may have switches 1, 2, 3, 7 & 9 in the ON position only.
- 2) Install the battery in the Remote Keypad Unit.
- 3) Write down your command line.

1 2 3 4	[Keypad code]
M 9	[Command code]
?	[All site code switches set to ON]
M	[Save your entry]

E.G. If we use the example shown in 1) above then the entire Command line will read
1 2 3 4 M 9 1 2 3 7 9 M

Additional examples:

- A. If all your Site Code switches are set to OFF then your command line will be 1 2 3 4 M 9 M.
- B. If all your Site Code switches are set to ON then the command line will read 1 2 3 4 M 9 1 2 3 4 5 6 7 8 9 M.

Note

2 beeps to confirm the entry is successful. If your entry is not successful, the unit will emit 3 beeps and ignore the entry. No motion up to 20 seconds during entry will cause same result. Repeat your command line if this occurs.

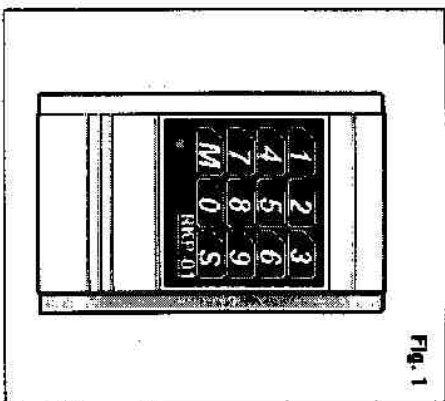


Fig. 1

STEP 2 SET THE KEYPAD SECURITY CODE

Write down your command line.

? ? ? ?	[Existing code - If new then use default 1 2 3 4]
M 0	[Command code]
? ? ? ?	[The new keypad code you have chosen]
M	[Saves your entry]

E.G. If you are connecting the unit for the first time and you want to change the Keypad code to 9 9 9 9 then the Command line will read 1 2 3 4 M 0 9 9 9 9 M.

DAY TO DAY OPERATION

Day-to-day operation is performed by the following:

To ARM your system	? ? ? ? S	[Use your 4 digit code]
To DISARM your system	? ? ? ? S	[Use your 4 digit code]
To activate the Panic zone	M - S	[Press M & S together]

KEYPAD LOW BATTERY WARNING

When the battery is low in the keypad, 10 successive warning beeps are given when the user attempts to enter a code. The warning beeps will not interfere with the operation of the keypad unit.

Before removing the cover to install a new battery, remember to enter the battery change command on the main control panel or if used with the Solar Powered Siren enter the following:

- 1) Enter the system into ARM mode
- 2) Enter your code to Disarm the system
- 3) Repeat the disarm procedure once more

The system is now in Battery Change mode and the Solar Powered Siren will not sound when covers are removed to replace batteries.

To exit the battery change command enter the following:

1) ARM the system	2) DISARM the system
-------------------	----------------------

RESTORING TO FACTORY DEFAULT

To restore the memory back to the original manufacturers setting perform the following:

- 1) Remove the battery
- 2) Wait 5 minutes
- 3) Hold down the 0 and 8 button together and reconnect the battery simultaneously.

The keypad code will default back to the manufacturers' setting 1 2 3 4. Following this procedure you must reset your Site Code and your keypad code explained in step 1 & 2.